






## OPERATING INSTRUCTIONS

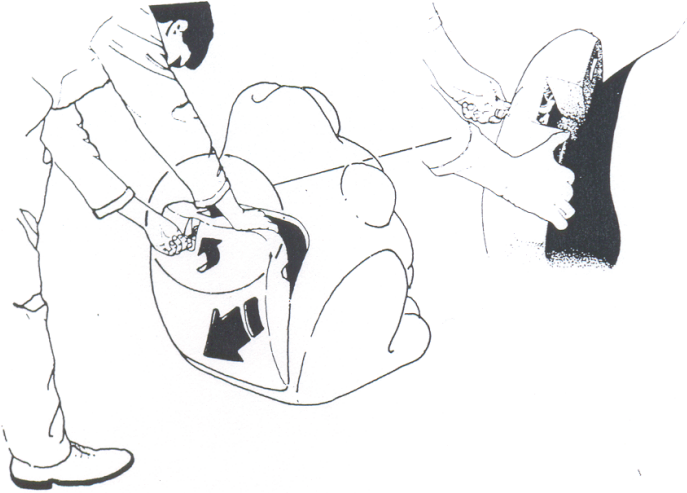


- 1** Using the key provided unlock and pull door away from main body. The door can then be lifted off using the hand holes provided.

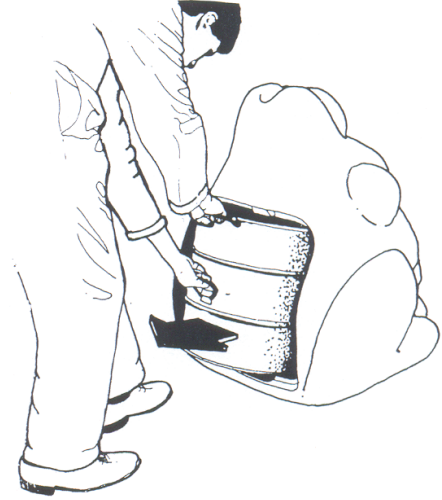


- 2** Lift and slide out galvanised steel liner using the two drop handles.

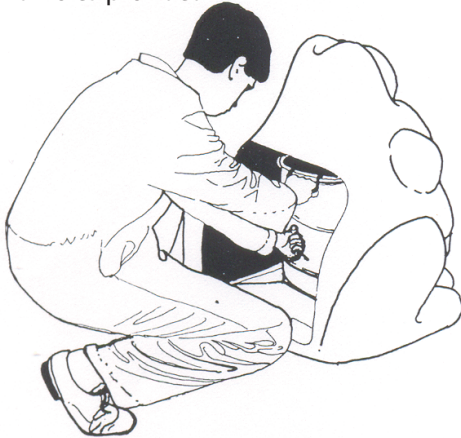

- 3** After emptying, simply slide the liner back into position.

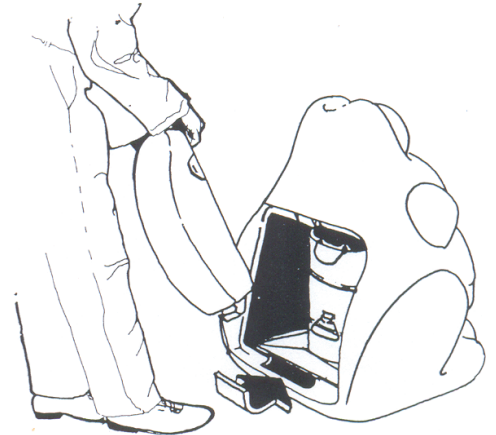


- 4** Locate bottom of door panel into base of main body.

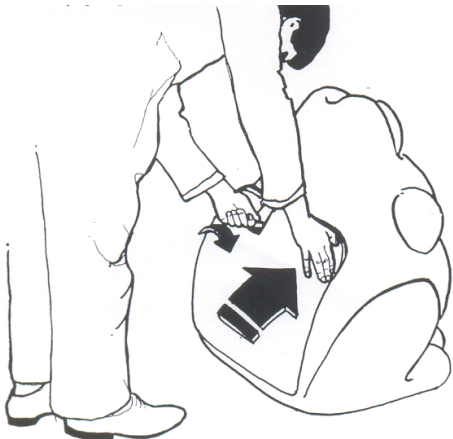

- 5** Simply push door panel back into its original position and lock with special key provided.

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON.
- GLASDON cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.

 **Glasdon**<sup>®</sup> AND FROGGO<sup>™</sup> ARE TRADEMARKS OR REGISTERED TRADEMARKS OF GLASDON GROUP OR ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES



**Glasdon**<sup>®</sup>  
**Glasdon U.K. Limited**  
 Preston New Road  
 BLACKPOOL  
 Lancashire  
 FY4 4UL

Tel: (01253) 600410  
 Fax: (01253) 792558  
 e-mail: sales@glasdon-uk.co.uk  
 web: www.glasdon.com