


Locate both door catches through slots inside Splash's fins.

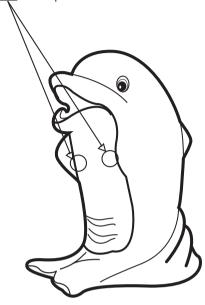

3 Tilt forward and lift out liner. After emptying replace liner.



Regular cleaning is essential

To maintain the pristine appearance of this quality product all surfaces of the unit should be regularly cleaned with warm, soapy water and thoroughly rinsed. This is important in maintaining both the outward appearance of the product and ensuring ease of operation.

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON.
- GLASDON cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.

Issue 2 December 2004 Stock no. C000/0089
© Copyright December 2004. Glasdon reserve the right to alter specification without prior notice.

Whilst lifting both catches, pull door and lift away from Splash.



Using location peg on base of door locate peg into base and push door shut.



Glasdon® And Splash are trademarks or registered trademarks of glasdon group or its subsidiaries in the U.K. and other countries



Preston New Road BLACKPOOL Lancashire FY4 4UL

Tel: (01253) 600410 Fax: (01253) 792558 e-mail: sales@glasdon-uk.co.uk web: www.glasdon.com