

Glasdon® **Metal Fido™/Trimline™ 35 & 50** Installation Instructions

PERMANENT WALL MOUNTING


Important Note: Ensure that all relevant personnel read the points listed below and that a copy is passed on to staff involved with the installation

EQUIPMENT NEEDED

Installation Instructions
Electric/Cordless Power Drill
Masonry Drill Bit N° 14 (9.32")
17mm Socket / Spanner
Screwdriver
Hammer
Marking Implement
Safety Glasses

YOU SHOULD HAVE

A - Bin Outer c/w Lid
B - M10 Washer x4
C - M10 Shake Washer x4
D - Hex-Head Screw x4
E - Top Bracket x1
F - Bottom Bracket x1
G - N° 12 Wall Screws x 4
H - N° 12 Plastic Wall Plugs x 4
J - M8 Washer x4

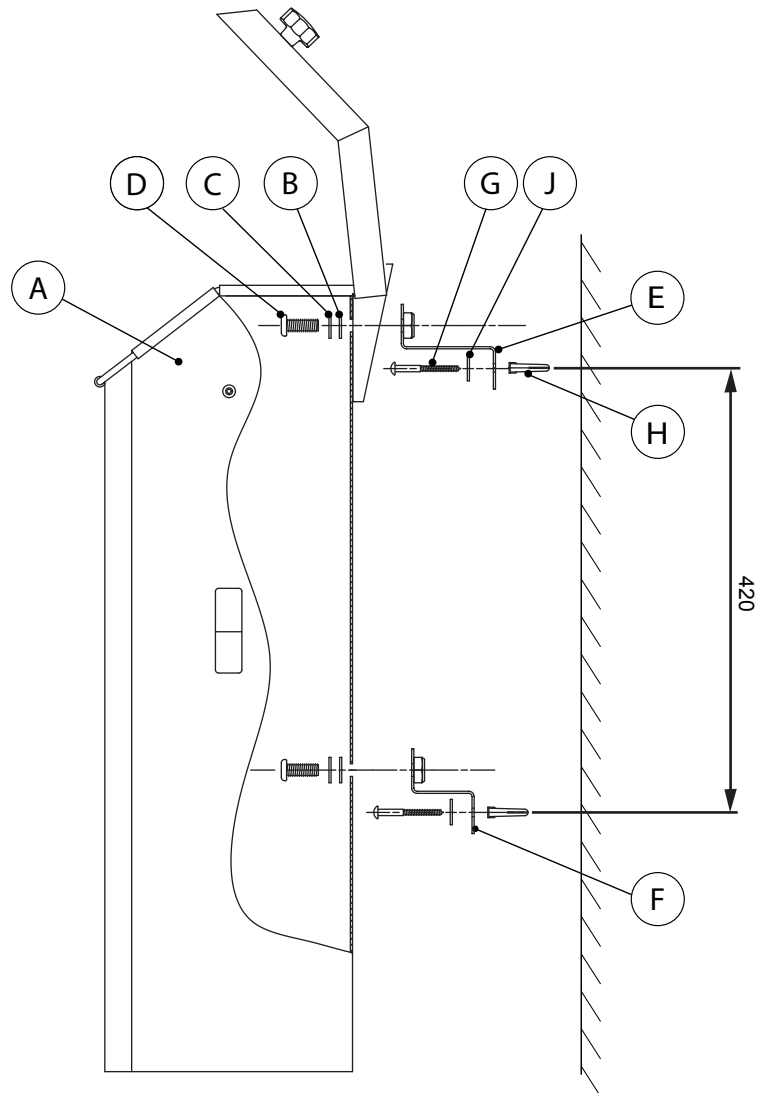

Method

- 1 After deciding where to site the bin and at what height, use the top bracket (E) as a guide to mark the position of the two holes on the wall. Ensure the two holes are horizontal and the correct distance apart (as shown above in illustration).
- 2 Now mark the position of the two holes for the bottom bracket (F). Do this by measuring 420 mm vertically down from each of the top two holes.
- 3 When you are happy with the positioning of the holes, drill and plug the wall, ready to accept brackets and screw fixings.
- 4 Using the wall screws (G) fix the top and bottom brackets onto the wall.
- 5 Offer bin up to fixed wall brackets. Use washers (B & C) and screws (D), to fix the bin to the brackets from the inside of the bin.
- 6 Ensure all of the fixing assembly is tightly secured.



Glasdon®

Metal Fido™/Trimline™ 35 & 50

Installation Instructions

PERMANENT POST MOUNTING


Important Note: Ensure that all relevant personnel read the points listed below and that a copy is passed on to staff involved with the installation

EQUIPMENT NEEDED

Installation Instructions
17mm Socket / Spanner
Screwdriver

YOU SHOULD HAVE

- A - Bin Outer c/w Lid
- B - M10 Washer x4
- C - M10 Shake Washer x4
- D - Hex-Head Screw x4
- E - Top Bracket x1
- F - Bottom Bracket x1

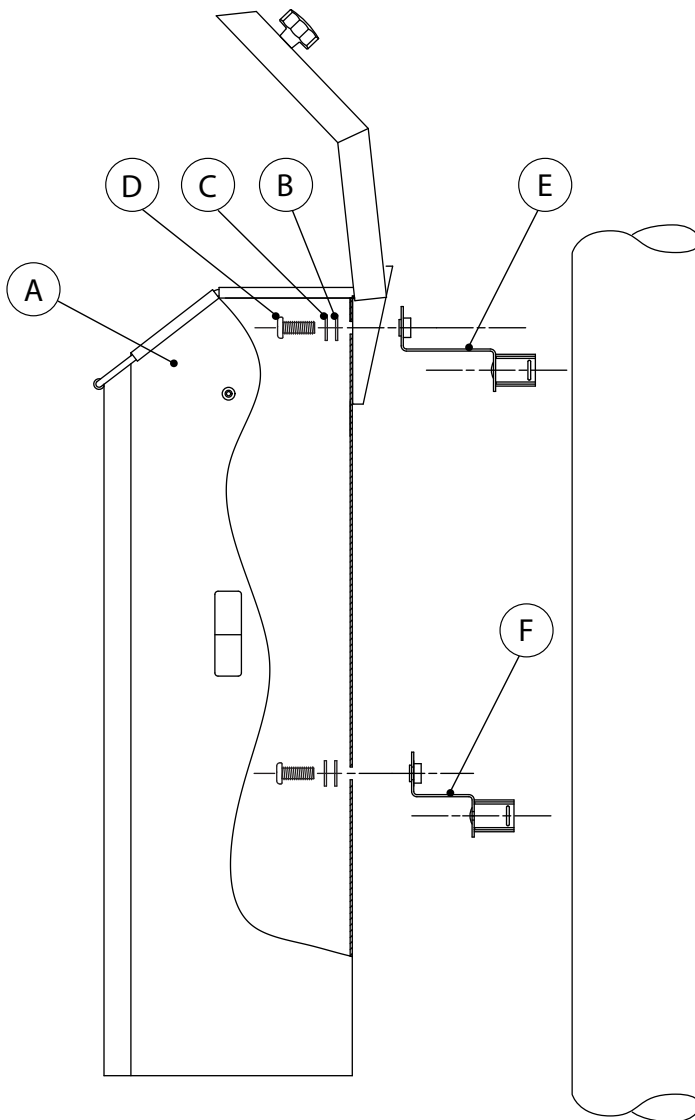

Method

- 1 UPPER MOUNTING**
Hold the Top Bracket (E) to back of bin body, in line with the top pair of pre-drilled holes. Using the Washers (B & C) and Hex-head screws (D) fix the bracket assembly to the bin.
- 2 LOWER MOUNTING**
Repeat the fixing operation with the Bottom Bracket (F). Attach it to the bin through the lower pair of pre-drilled holes.
- 3** Fix around selected post using either TESPAs or TAMTORQUE system through both 'C' brackets.
NOTE: TESPAs are not included with the kit, but are available from Glasdon UK as a separate kit.

Glasdon®, METAL FIDO™ AND METAL TRIMLINE™ ARE TRADEMARKS OR REGISTERED TRADEMARKS OF GLASDON GROUP OR ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON.
- GLASDON cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.



Glasdon®

Glasdon U.K. Limited

Preston New Road
BLACKPOOL
Lancashire
FY4 4UL

Tel: (01253) 600410
Fax: (01253) 792558
e-mail: sales@glasdon-uk.co.uk
web: www.glasdon.com