

PIXIE SEAT™


Installation Instructions For Below Ground Fixing

Included in this kit: Galvanized fixing tube, base, top, adhesive.
A standard mastic gun will be required to apply the adhesive

SAFETY NOTES

Prior to starting, please read the Health and Safety label on the side of the adhesive container. If further information is required please contact the supplier, address and phone number, which are to be found on the label. Please refer to 'The Manual Handling Operation Regulations 1992' during handling

PROCEDURE

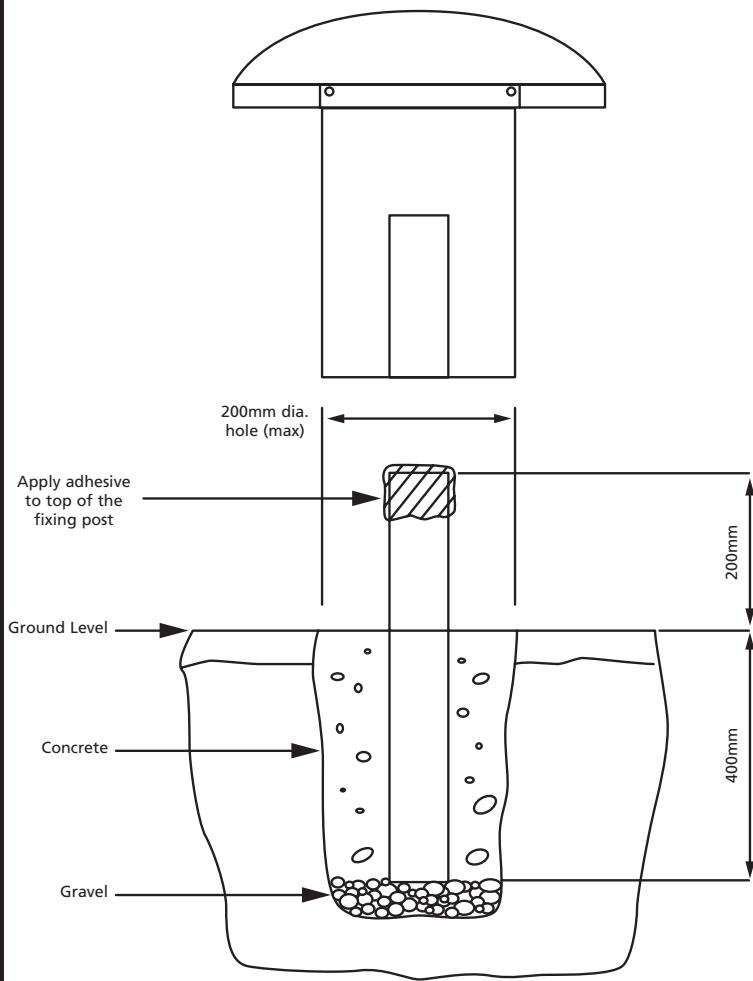

GROUND PREPARATION

Prepare a 400mm deep hole (min) by 250mm diameter (max).

Note: Keeping the hole diameter to 250mm (max) ensures that the concrete will be totally covered by the base of the seat.

POSITIONING THE GROUND FIXING POST

Position the galvanized tube centrally in the hole with the anchor bar downwards.

Pack the hole with gravel to leave 200mm of the tube protruding from ground level.

Support the tube centrally and vertically.

Fill the hole to ground level with concrete containing stony aggregate. Leave supported until the concrete sets.

ADHESIVE APPLICATION (using a standard mastic gun)

After the concrete has set, carefully apply two beads of adhesive to the outside face of the galvanized tube.

Keeping it at the desired orientation, slide the base down the galvanized tube until it is at ground level.

Allow 48 hours for the adhesive to set to full strength.

Installation is now complete.

MAINTENANCE

To clean the exterior of the product we recommend using a cold pressure wash with soap or, alternatively, hand washing with a soft brush and cold soapy water, rinsing it thoroughly afterwards to remove any residue.

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON.
- GLASDON cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.