


LO-CO SEAT USER MANUAL AND INSTRUCTIONS

NOTE: Ensure that all relevant personnel read the points listed below and that a copy is passed on to staff involved with the installation. Please also refer to the 'Manual Handling Operations Regulations 1992' during the handling of the product and materials used for installation.

FIXING ONTO A PRE-PREPARED CONCRETE FOUNDATION OR CONCRETE PAVING:

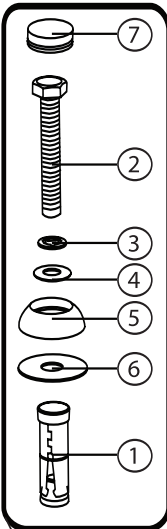

KIT CONTENTS:

ITEM 1. M10 x 60mm Anchor Shield	x 6
ITEM 2. M10 x 110mm Hex Head Screw	x 6
ITEM 3. M10 Shakeproof Washer	x 6
ITEM 4. M10 x 20mm Washer	x 6
ITEM 5. Cover Cap Base	x 6
ITEM 6. M10 x 40 x 1.5mm Washer	x 6
ITEM 7. Cover Cap Lid	x 6

TOOLS REQUIRED:

Hammer Drill
 Ø10mm Masonry Drill Bit
 Ø16mm Masonry Drill Bit
 17mm Spanner/Socket
 Hammer
 Pencil/Pen




STEP 1 Place the seat into the chosen location ensuring the ground is flat and all fixing points avoid existing grids etc.

STEP 2 Using the Ø10mm drill bit, carefully 'spot' each of the six holes through the six fixing points to mark pilot holes for the fixing positions into the concrete. Move the seat away and open up the pilot holes using the Ø16mm drill bit to a min. depth of 60mm (See Fig. A).

STEP 3 Check the seat aligns with the drilled holes.

STEP 4 Move the seat to one side again, then take Item 1's and hammer them into the base holes until the top of the Anchor Shield is flush with the ground.

STEP 5 Replace the seat and assemble Items 2 to 6, placing them through the six holes into the base as shown. Carefully finger tighten to check thread alignment, and then tighten with the 17mm spanner. Place Item 7's over the top of the bolt heads to secure.

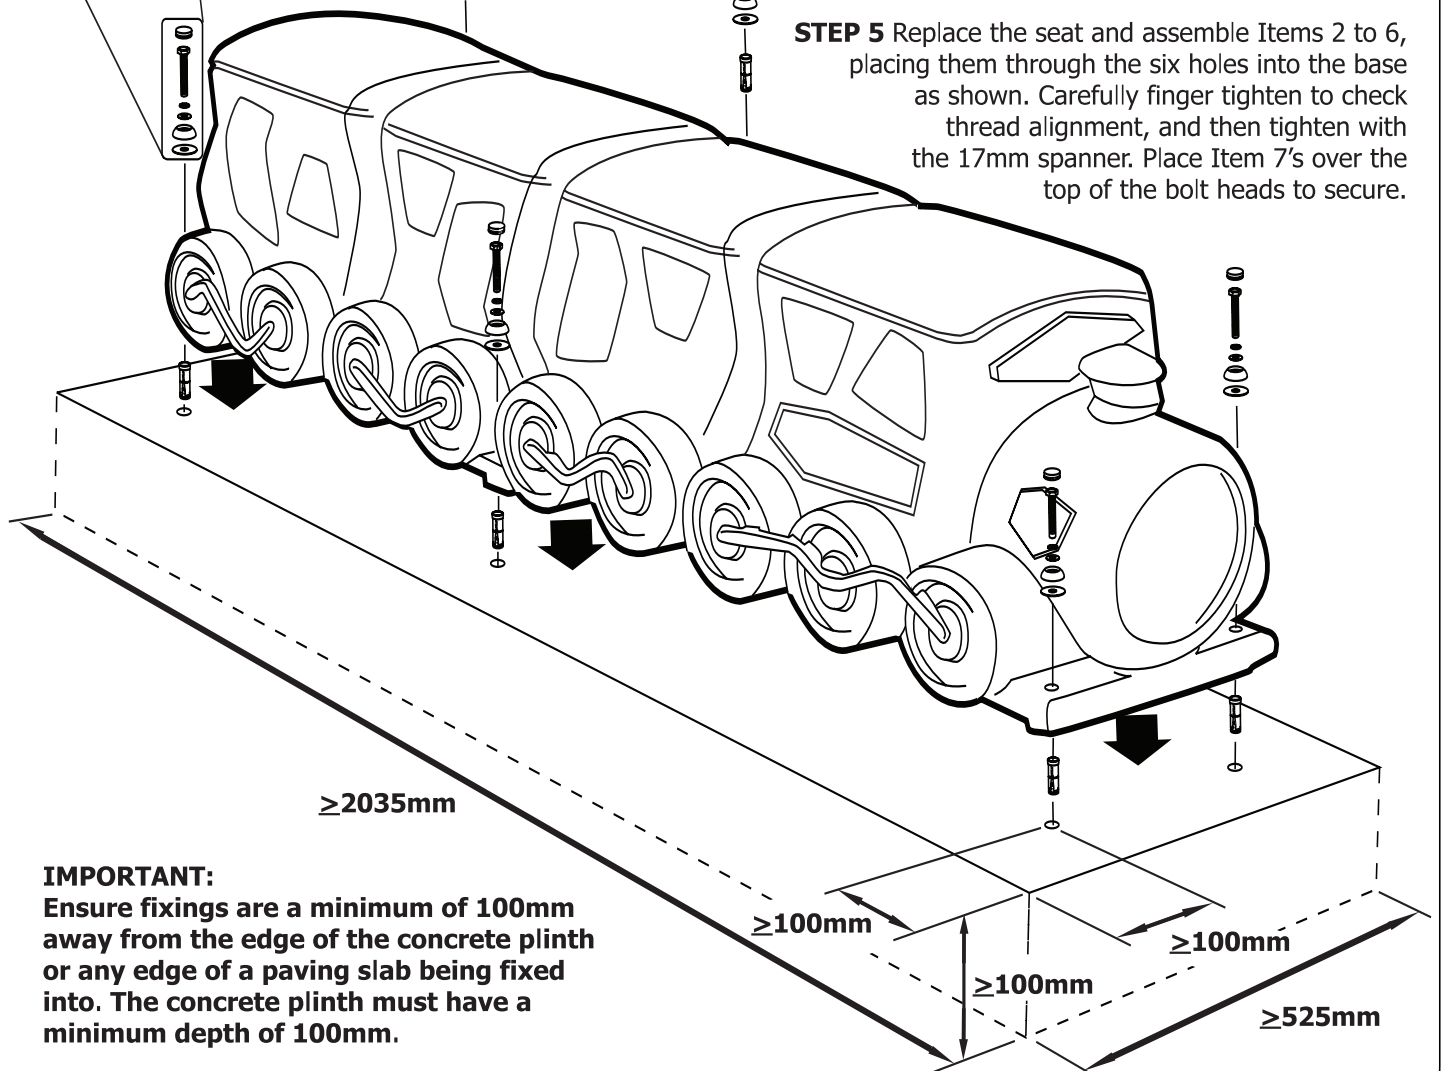

IMPORTANT:

Ensure fixings are a minimum of 100mm away from the edge of the concrete plinth or any edge of a paving slab being fixed into. The concrete plinth must have a minimum depth of 100mm.

FITTING FREESTANDING NON SLIP PVC FEET:


KIT CONTENTS:

ITEM 1. M6 x 55mm Screw	x 4
ITEM 2. PVC Rubber Foot	x 6
ITEM 3. M6 x 18mm Washer	x 6
ITEM 4. Cover Cap Base	x 6
ITEM 5. M6 x 40mm Spacer	x 6
ITEM 6. M6 x 10mm Spacer (FRONT ONLY)	x 2
ITEM 7. M6 Nylock Nut	x 6
ITEM 8. Cover Cap Lid	x 2
ITEM 9. M6 x 65mm Screw (FRONT ONLY)	x 2

TOOLS REQUIRED:

10mm Spanner/Socket Wrench
Allen Key (Supplied)



STEP 1 Turn the seat upside down or on one side to gain access to the fixing holes. Place Item 1 through Item 2 and then Item 5 and push the thread of the fixing through the hole in the base from the underside (See Fig. B).

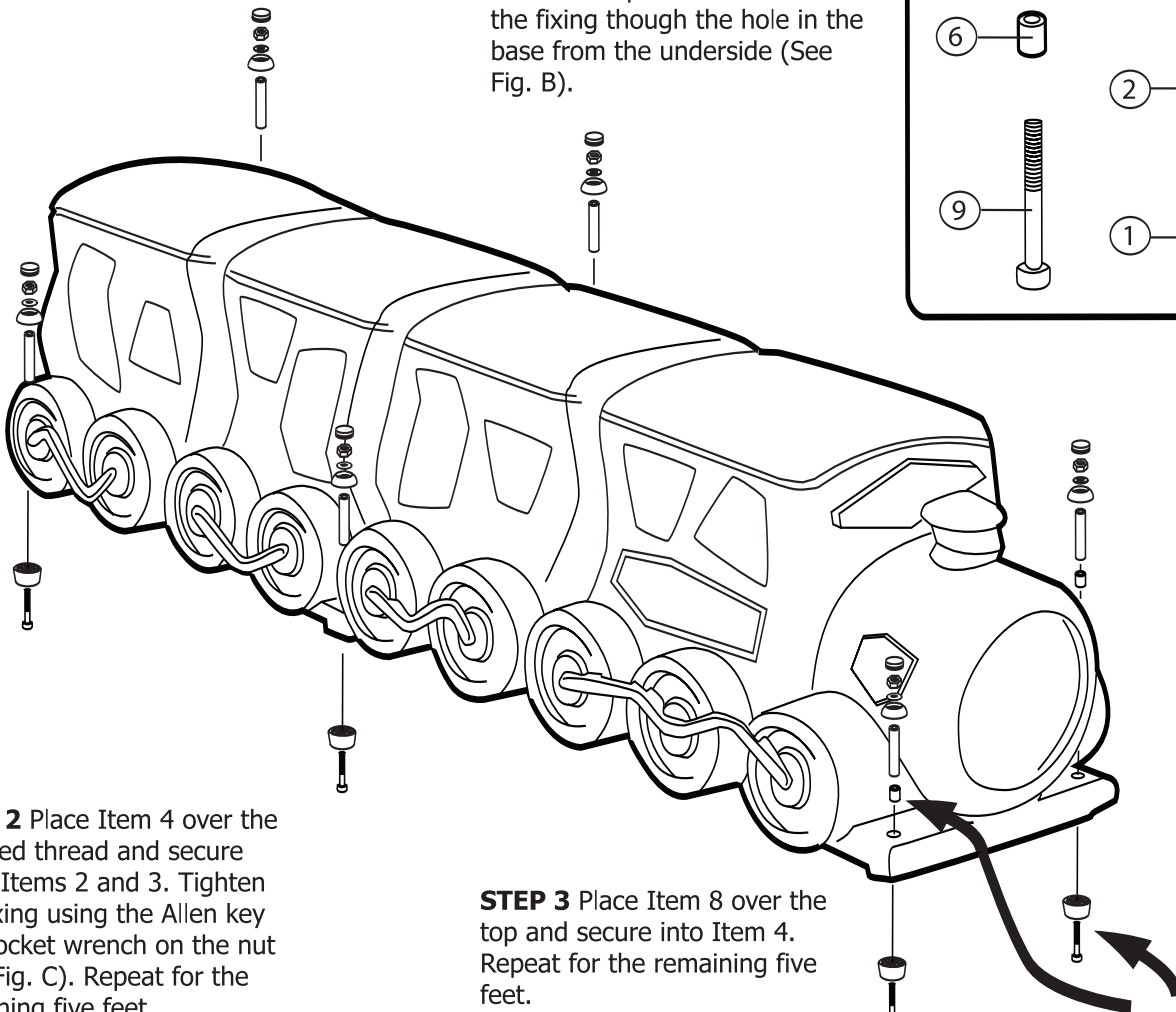

STEP 2 Place Item 4 over the exposed thread and secure using Items 2 and 3. Tighten the fixing using the Allen key and socket wrench on the nut (See Fig. C). Repeat for the remaining five feet.

STEP 3 Place Item 8 over the top and secure into Item 4. Repeat for the remaining five feet.

IMPORTANT:
For the front fixings ONLY, use Item 9, the longer 65mm screw AND Item 6 spacer extension in addition to the other fixings in the kit.

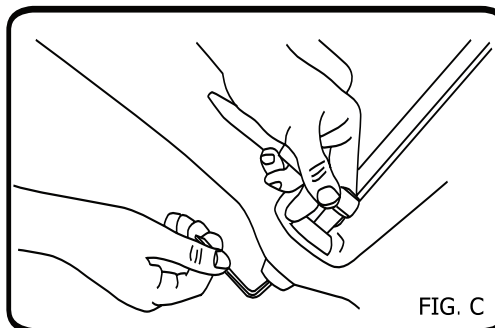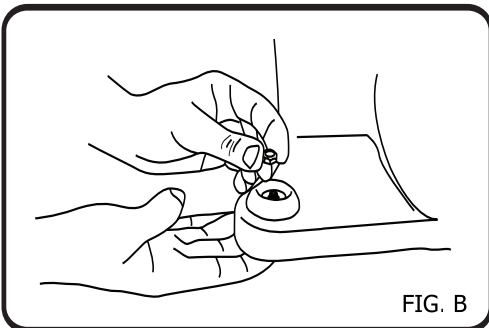

Glasdon AND LO-CO IS A TRADEMARK OF GLASDON GROUP AND ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES.

Replacement components are available direct from GLASDON.

GLASDON cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.

Issue 1 November 2010 C000/0334
© Copyright 2010

Glasdon reserves the right to alter specifications without prior notice.

Glasdon[®]

Glasdon U.K. Limited

Preston New Road
BLACKPOOL
Lancashire
FY4 4UL

Tel: (01253) 600410
Fax: (01253) 792558
e-mail: sales@glasdon-uk.co.uk
www.glasdon.com