


COMBO™ INSTRUCTION LEAFLET


NOTE: Ensure that all relevant personnel read the points listed below and that a copy is passed on to staff involved with the installation. Please also refer to the 'Manual Handling Operations Regulations 1992' during the handling of the product and materials used for installation.

OPENING AND CLOSING THE UNIT:

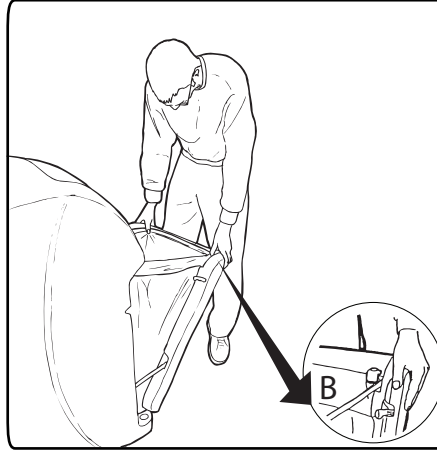


1. To open the door , lift both catches (Diagram A).
2. When both latches are released the door can be lowered until it is held by the retention straps (Diagram B).
3. Place and open sack between the steel sack band and wrap it around the front rubber grips (Fig B). Raise the steel sack band to a slight angle and wrap the sack around it before returning the band to its original position.
4. To close the bin simply push the top edge of the door ensuring both catches are engaged.

DOOR REMOVAL:

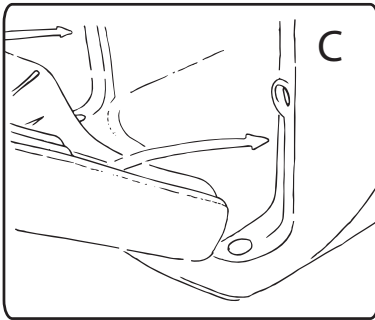


1. Open the door as described in Foig A and B.
2. Twist the connection cords 90degrees and pull away from the unit.
3. Lift the door to remove from the unit.

FLAP REMOVAL:

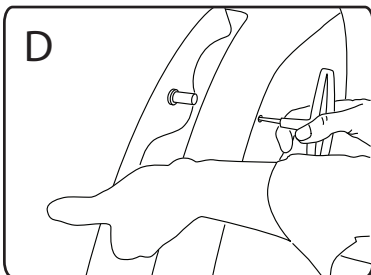

1. Partially open the flap using the left hand, holding it at its base.
2. Place the T-shaped key provided in the small location hole situated on the right hand side of the body, adjacent to the flap (Diagram G). The key should be at a slight upward angle.
3. Lift the flap upwards and out of its locators.

TRAY STACKING:

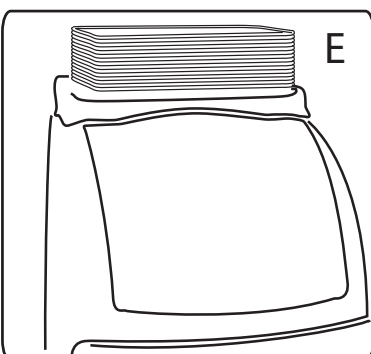

It is recommended that a maximum number of fifteen trays are stored on the tray holder (Diagram E).

For additional stability it is suggested that a tray is permanently attached to the base of the tray holder using self-tapping screws.

GROUND FIXING:





KIT CONTENTS:

ITEM 1	TLM Fixing Bolts	x4
ITEM 2	37mm Plastic Spacers	x2
ITEM 3	M10 x 50mm Washers	x2

TOOLS REQUIRED:

Hammer
17mm Spanner and Socket Head
Electric Drill
10mm Masonry Drill Bit
Marker Pen

1. Remove the two black hole plugs at the front inside base of the unit.
2. Using the fixing holes as a guide, mark on the ground where the ground fixing bolts will go.
3. Drill the four holes marked to a minimum depth of 130mm using a 10mm masonry drill.
4. Remove the nut from the fixing bolts (Item 1) and slide on the plastic spacers (Item 2) followed by an m10 washer (Item 3).
5. Using the hammer insert the two rear fixing bolts into the ground leaving 65mm protruding above ground. Fig 1.
6. Slide the bin backwards onto the fixing bolts ensuring the bolts are located within the fixing recesses. Fig 2.
7. Insert the remaining fixing bolts through the front of the unit.
8. Fully tighten all bolts using the supplied nuts until the bin is securely fixed. Fig 3 and 4.

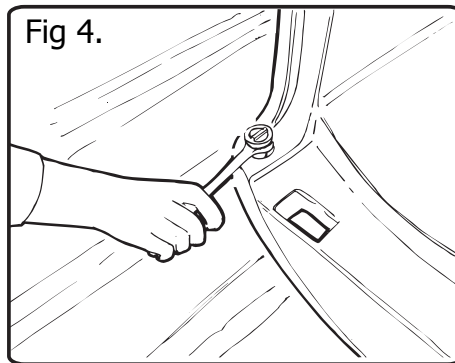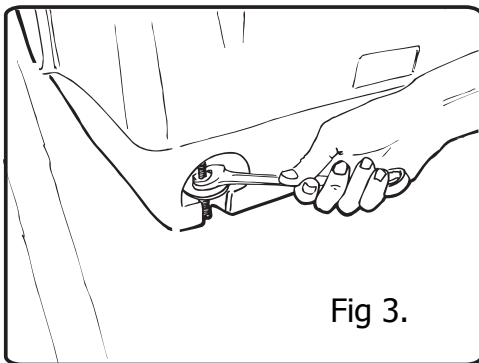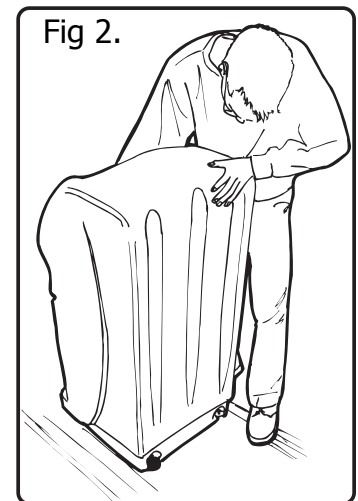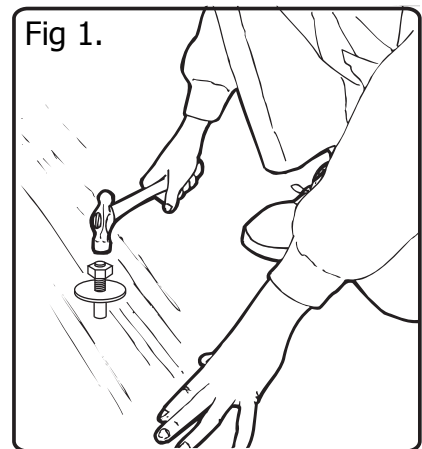

CLEANING AND MAINTENANCE:

Cleaning

We would recommend a warm pressure wash with soap or alternatively hand wash with 10% solution of mild detergent in warm water using a soft bristle brush followed by a rinse with clean water.

Graffiti

Felt tip pen or paint may be removed from Durapol™ using Glasdon Grafitix™ Graffiti wipes or other proprietary graffiti remover. Carefully follow the instructions, particularly the guidelines covering safety. Ensure that all traces of chemicals are removed then clean as detailed above. Please be aware that graffiti removers can damage signs and personalisation stickers etc. Protect these areas when using graffiti removers.

Maintenance

A planned maintenance schedule of regular inspection is recommended and components replaced when necessary.



GLASDON COMBO IS A TRADEMARK OF GLASDON GROUP AND ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES.

Replacement components are available direct from GLASDON.
Glasdon U.K. Ltd reserves the right to alter specifications without prior notice.
GLASDON cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.

Issue 3 March 2012 C000 /0248
© Copyright 2012



Preston New Road
BLACKPOOL
Lancashire FY4 4UL
Tel: 01253 600410
Fax: 01253 792558
E-mail: sales@glasdon-uk.co.uk
Web: www.glasdon.com