
MODEL SPECIFICATION NEOPOLITAN[™] DELINEATOR - SOCKETED

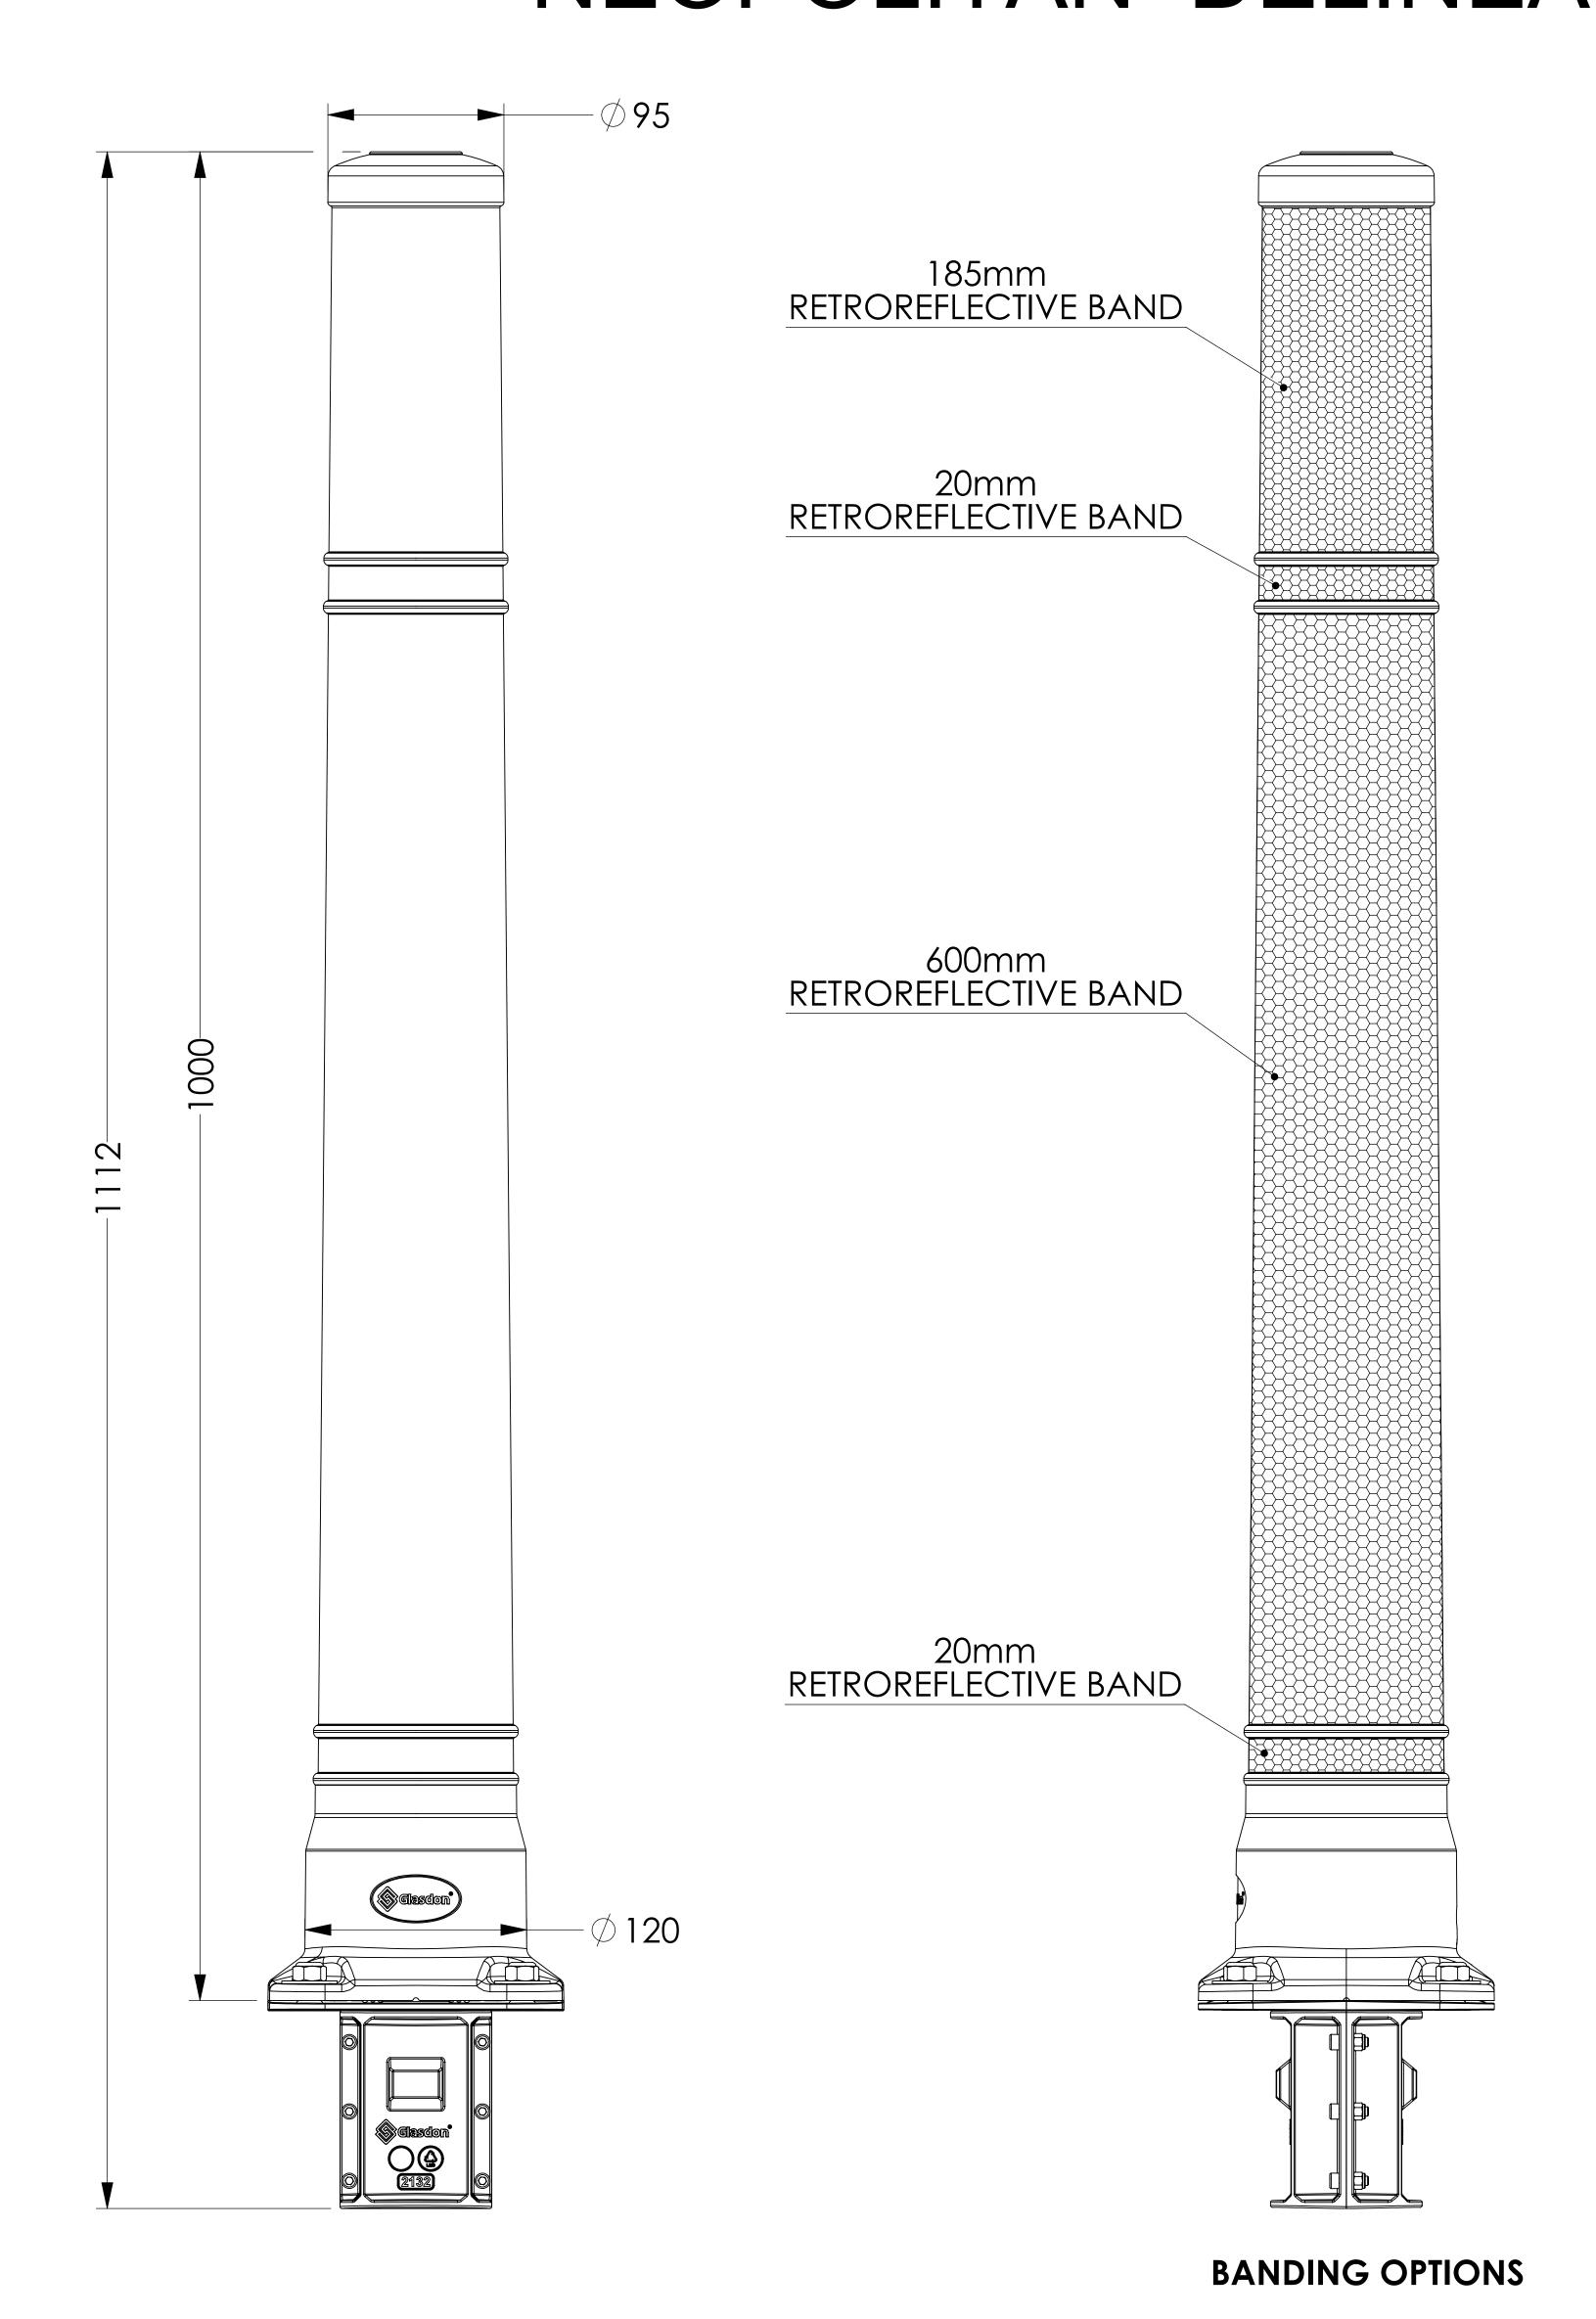

TARMAC TOP DRESSING LAYER GROUND LEVEL MINIMUM DISTANCE FROM ANY EDGE OF THE CONCRETE / TARMAC

PRODUCT INFORMATION:

DESCRIPTION

REBOUNDABLE POST FOR DELINEATING TRAFFIC.

• MATERIAL

DELINEATOR POST: REFLEXAPOL®

SOCKET / SOCKET ADAPTER BASE: ALUMINIUM

FIXINGS: STAINLESS STEEL

RETROREFLECTIVE BANDS: 3M - 3310 SERIES

DIMENSIONS

ALL DIMENSIONS IN mm UNLESS OTHERWISE STATED.

- COLOURS
- RED
- BLACK
- WEIGHTS

DELINEATOR POST C/W SOCKET ADAPTER BASE: 2.56kg

LOCKFASTTM MINI SOCKET: 0.45kg

- BANDING OPTIONS
- 600mm RETROREFLECTIVE BAND (WHITE)
- 185mm RETROREFLECTIVE BAND (WHITE)
- 20mm RETROREFLECTIVE BAND TOP (WHITE)
- 185 & 20mm RETROREFLECTIVE BAND TOP / BOTTOM (WHITE)
- 2 x 20mm RETROREFLECTIVE BAND TOP / BOTTOM (WHITE)

INSTALLATION INSTRUCTIONS:

ITEM 1 - DELINEATOR POST C/W SOCKET ADAPTER BASE

ITEM 2 - GLASDON KEY

ITEM 3 - LOCKFAST™ MINI SOCKET

- KEEP A MINIMUM DISTANCE OF 100mm FROM ANY EDGE OF CONCRETE OR TARMAC BASE.
- BORE A HOLE IN DESIRED POSITION. Ø91mm x 110mm DEEP HOLE IS STRONGLY RECOMMENDED.
- ENGAGE SOCKET WITH SOCKET ADAPTER BASE. (ATTACHED TO THE POST)
- FILL APPROXIMATELY 1/4 (APPROX. 200ML) OF THE HOLE WITH FAST SETTING RESIN AND QUICKLY PLACE THE SOCKET INTO THE RESIN. ENSURE THAT THE POST IS FACING THE DESIRED ORIENTATION AND THAT THE SOCKET IS STILL CORRECTLY ENGAGED WITH THE POST/ADAPTER BASE.
- WAIT THE RESIN SPECIFIC WORKING CURE TIME, THEN REMOVE THE POST FROM THE SOCKET USING THE GLASDON KEY.
- BACKFILL THE REMAINING AREA AROUND THE SOCKET WITH RESIN TO GROUND LEVEL. ENSURE NOT TO OVER FILL THE HOLE AS THIS WILL PREVENT THE LOCK FROM WORKING.
- ONCE THE RESIN HAS FULLY CURED, PLACE THE POST BACK INTO THE SOCKET, CHECKING THAT THE LOCK CORRECTLY ENGAGES.

