

Ashmount SG[™] Cigarette Bin fitted with SmokeGuard[™]; a unique smoke dampening device

INSTALLATION INSTRUCTIONS AND USER MANUAL



IMPORTANT NOTE: ENSURE THAT ALL RELEVANT PERSONNEL READ THE POINTS LISTED WITHIN THIS LEAFLET AND THAT A COPY IS GIVEN TO STAFF INVOLVED WITH THE INSTALLATION AND MAINTENANCE OF THIS PRODUCT.




PERMANENT AND LIFT OFF WALL MOUNTING INSTRUCTIONS


KIT CONTENT	'S
Woodscrews	x4
Wall Plugs	x4
Washers	x4

x4 Spacers x4 x4 x4


TOOLS REQUIRE	D:		
Battery Drill	×1	Scriber	x1
10mm Drill Bit	x1		
Screwdriver	x1		

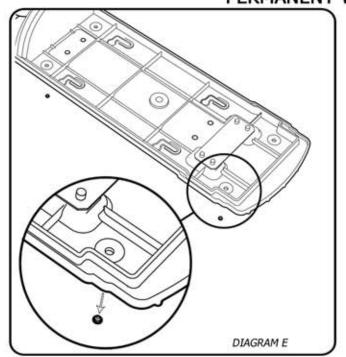

1. After opening the Ashmount SG and removing the liner, pop out all four of the holes as shown above (we recommend using a screwdriver for this). Now position the Ashmount onto a wall and mark out the holes using a scriber (recommended height from the ground to the top of the unit is 1500mm).

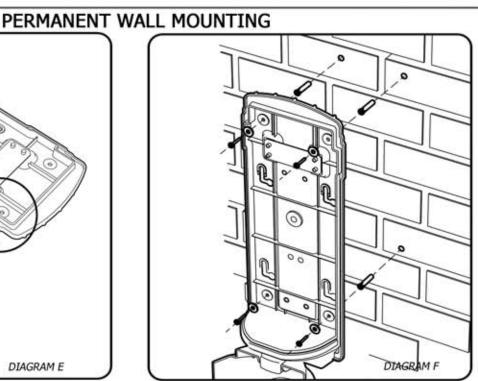


2. Now remove the Ashmount SG and drill the holes using a 10mm drill bit and insert a wall plug into each hole. The Ashmount can now be repositioned ensuring the holes match up and screwed onto the wall using a washer and a screw provided in the kit.

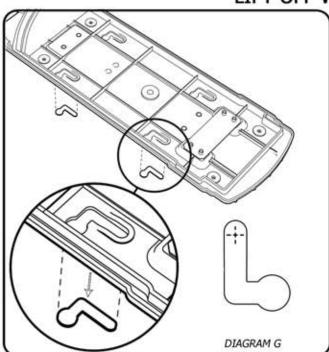

1. After opening the Ashmount SG and removing the liner, pop out all four of the 'L' shapes as shown above. Now position the Ashmount onto a wall and mark out the centre point of the circle within each 'L' shape using a scriber (recommended height from the ground to the top of the unit is 1500mm).


LIFT OFF WALL MOUNTING

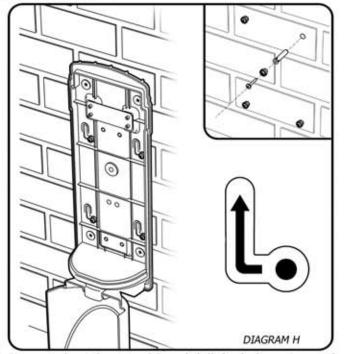


2. Remove the Ashmount SG and drill the holes using a 10mm drill bit and insert a wall plug into each hole. Screw a spacer and a screw into each hole. The unit can now be slotted onto the proud screws(as shown by the arrow above) and removed when required. If you have any difficulty attaching the unit the screws may need to be loosened slightly.




POST MOUNTING INSTRUCTIONS

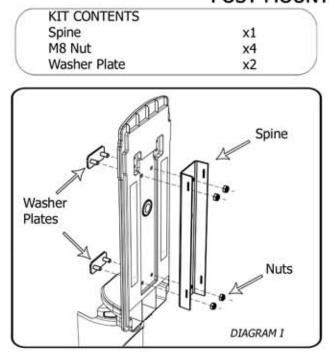

1. After opening the unit and removing the liner, pop out all four of the holes as shown above (we recommend using a screwdriver for this). Now insert the washer plates through the holes which have just been created. Take the spine and position onto the rear of the unit and insert onto the washer plate studs. Secure using the nuts provided with a 13mm spanner.

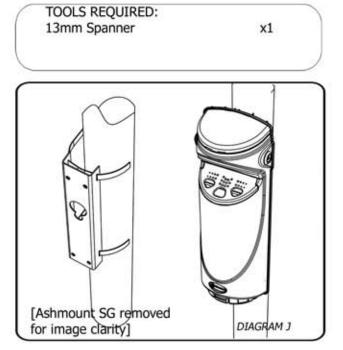


 Secure the Ashmount SG to a post using either Glasdon tamtorque banding (call Glasdon for details) or Tespa banding and follow the instructions issued with the banding.

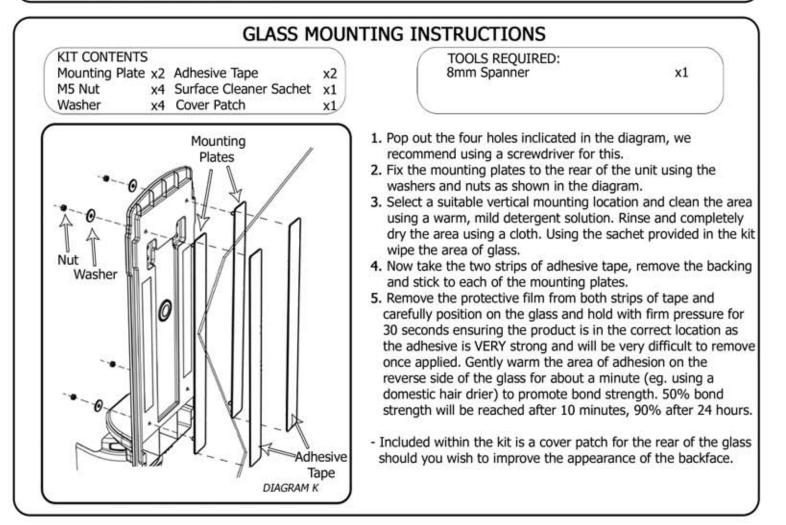




USING AND MAINTAINING YOUR ASHMOUNT SG

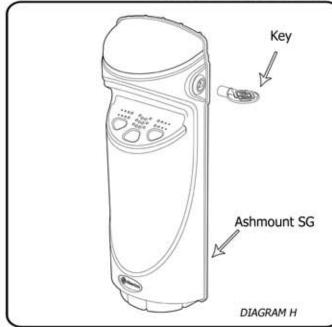


1. Unlock your Ashmount SG using the key provided by turning anti clockwise (see diagram above). It can be unlocked from either side.

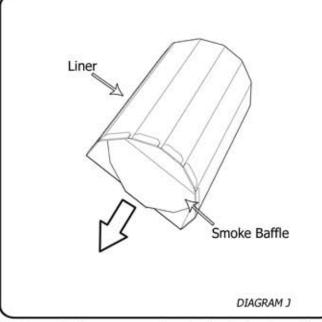

Empty the liner contents by simply tipping it upside down (the smoke baffle will pivot to allow the contents to fall freely). Door Diagram I

The door will now pivot open and the liner can be removed for emptying.

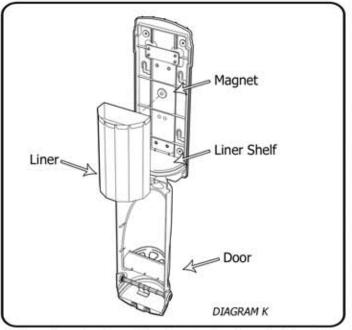

4. To replace the liner place it onto the liner shelf and the magnet will hold it securely. The door can now be closed and locked using the key as shown in step 1.

TO ENSURE THE PRODUCT WORKS EFFICIENTLY WE RECOMMEND THAT THE PRODUCT IS CLEANED REGULARLY WITH A WARM PRESSURE WASH WITH SOAP OR ALTERNATIVELY HAND WASH WITH 10% SOLUTION OF MILD DETERGENT IN WARM WATER USING A SOFT BRISTLE BRUSH FOLLOWED BY A RINSE WITH CLEAN WATER. PLEASE PAY PARTICULAR ATTENTION TO THE LOCK AREA AND THE PIVOTING SMOKE BAFFLE (SHOWN IN DIAGRAM J).

Glasdon AND ASHMOUNT SG^{IM} ARE TRADEMARKS OR REGISTERED TRADEMARKS OF GLASDON GROUP OR IT'S SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON.
- GLASDON cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.

Issue 1 2006 Stock no. C000/0325

Copyright 200

Glasdon UK Ltd reserve the right to alter specification without prior notice.



Glasdon U.K. Limited Preston New Road BLACKPOOL Lancashire FY4 4UL Tel: 01253 600 410 Fax: 01253 792 558 e-mail: sales@glasdon-uk.co.uk web: www.glasdon.com